

Installation - Master Flash® Standard



1 Select an appropriate Master Flash® Standard with a pipe range that goes below and beyond fitting. If necessary, use the lines clearly shown on the flashing to trim an opening 20-30% smaller than pipe diameter.



2 Slide the Master Flash® down the pipe, using a non-petroleum-based lubricant to ease installation.



3 Press Master Flash® down, bending it to conform to roof profile or irregularities. A blunt tool will help to form flashing to tight roof angles.



4 Apply sealant between the base of the flashing and the roof.



5 Use fasteners to complete sealing. For a secure installation, fastener spacing must not exceed 1.5" (38 mm).